


● Movable camera stand

You can move the camera up and down by loosening the handle.

※Do not remove the quick shoe.



You can tilt the camera by loosening the camera stand stopper.

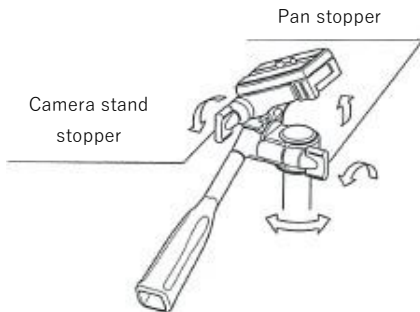


You can rotate the camera left and right by loosening the pan stopper




● Expansion and contraction of pole

It can be expanded and contracted by raising the pole and leg lever.

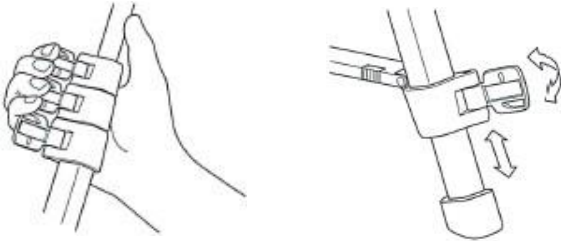

● Adjusting the leg width of the tripod

You can adjust the width of the tripod legs by loosening the elevator stopper.

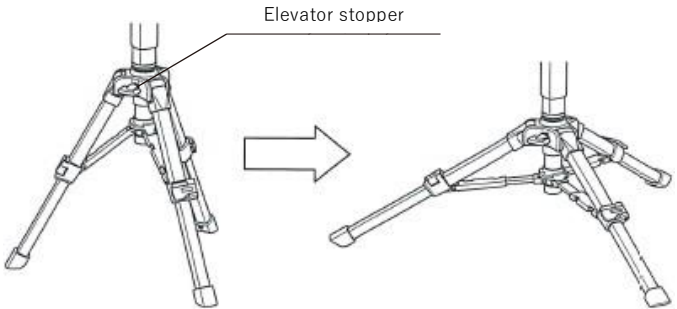

Be sure to tighten the loosened parts.

Please return it to its original position after use.